Manuel d'utilisation

Peut dupliquer une grande majorité de télécommande : alarme maison, voiture, portail, garage…Ne copie pas les télécommandes de voiture d'origine et avec Fonction Rolling code. Fréquence : 433 Mhz. Puces compatibles : PT2262, PT2264, PT2260, PT2240, EV1527, FP527, etc

Étape 1:

Appuyez sur la touche A et B en même temps, jusqu'à ce que la LED Bleu clignote (env.3 sec), puis relâchez les 2 boutons.

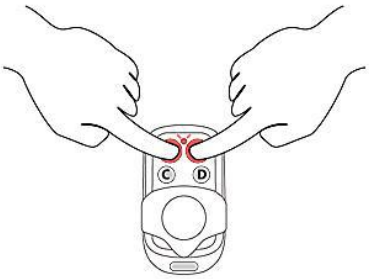

Étape 2: copie

Placez la télécommande originale à côté afin qu'elles se touchent. Appuyez simultanément sur un bouton de votre télécommande originale et sur le bouton choisi pour enregistrer sur la télécommande clone jusqu'à ce que la LED bleu clignote rapidement. (Le voyant bleu clignote 3 fois rapidement, puis s'arrête 1s, puis clignote à nouveau, cela signifie que votre clonage est réussi).Si cela ne fonctionne pas, recommencez l'opération en faisant glisser la copieuse le long de l'original.

Étape 3:

Si vous souhaitez enregistrer les autres boutons : B, C, D , recommencez l'étape 2.

Étape 4: restaurer les données supprimées par erreur

Si vous effacez par mégarde les codes enregistrés sur la télécommande copieuse, vous pouvez les récuperer en maintenant appuyé le bouton A et C simultanément, après 20 secondes, la LED clignote 2 fois et s'éteint ceci indique que l'ancien code a bien été récuperé.

Note: Pour éviter les interférences pendant le fonctionnement. Tenir à distance tout matériel électronique, téléphones mobiles…. Assurez-vous que votre télécommande est assez de puissance.

Remote Duplicator

User's Guide

It can duplicate the majority of the wireless remote control in the market, such as household burglar remote control, automobile with extra anti-theft remote control, motorcycles anti-theft remote control, electric vehicle anti-theft remote control, garage door remote control, electric door remote control, etc . Its not suitable for automotive original remote control

Use steps and methods:

Step 1: clear

Press the first and the second key at the same time, as the key pressed the light will flash, then turn to destroy, when turn to flash again, loosen it.

if clear successfully , as the moment of key pressed the light will flared up, as the key pressed down the light turn to destroy.

Step 2:copy

The left hand press and hold the button of the original remote control to be learning, make the remote duplicator close to the original remote control, and press its button which ready to copy by your right hand. When the light of remote duplicator turn to continuous flash , loosen it.

If copy successfully ,when you press the button the light will burnt always , and the function also have become same as the button of the original remote control.

Step 3:use

If done correctly, can use directly. If not, or individual button not useful, please turn to clean and copy again, notice the change of light during operation. If problems still exist after attempting several times, check the chip and frequency of original remote control again, and contact us.

Step 4: restore mistakenly deleted data

When the user during use of the mistake is cleared, and led to the accidental deletion of data, while holding down the second row of the first key, and the second row of the second button, press and hold at the same time, when the light has been flashing, that represent the data recovery success.

Related parameters:

a) working voltage: DC12V (one battery of 27A)
b) working current: ≤8mA
c) working frequency: 433MHz
d) modulation mode: ASK (amplitude modulation)
e) transmission power: ≤100mW
f) transmission distance: 50～100m (open space)
g) coding type: duplicate by self
h) working temperature: -10℃～+50℃
i) USES: remote control electric door, window, switch, security etc.